



Dutch Lighting™
Innovations



DLM-4 ZONE
Controller


7.10 Firmware Update Page

Occasionally the DLM-4 Zone Controller may release updated firmware / software for the DLM-4 Zone Controller. The new firmware may update older versions firmware, or add new functions to the DLM-4 Zone Controller. To update the firmware:


- 1 First visit www.dutchlightinginnovations.com to find out what the most recent version of the firmware is available for download.
- 2 On the DLM-4 Zone Controller unit, select the System Setup page.
- 3 The current firmware version will be shown at the bottom of the display. If the firmware needs to be updated, follow the prompts on the computer to download a copy of the newest firmware onto a MicroSD card.
- 4 Insert the MicroSD card into the slot on the bottom of the DLM-4 Zone Controller unit.
- 5 Access the Firmware Update menu by going back to the System Setup menu and scrolling down to Firmware Update.
- 6 Press the Enter button to enter the firmware update menu.




- 7 Press Enter to scan the SD card files.

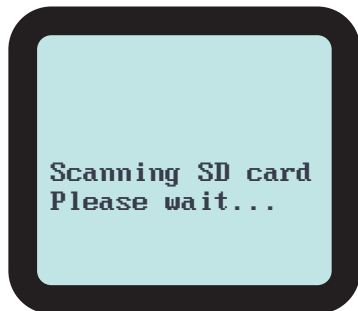

7.10 Firmware Update Page Continued...

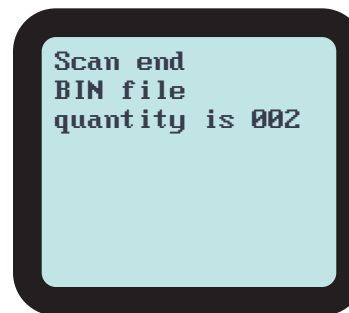

***NOTE:** If the scan does not find any firmware (BIN files), the display will show the following message.

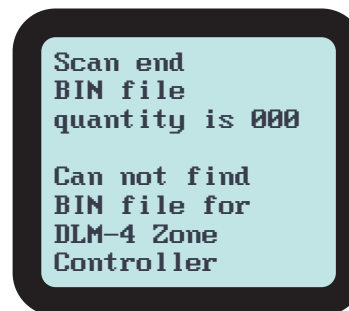

***NOTE:** If the scan does not detect the MicroSD card, the display will read:



- 8 If the scan is successful, the available firmware file(s) will be displayed. Move the cursor to the newest version of the firmware to be installed.



- 9 Select the file to be updated.
10 Press the Enter button.
11 Verify the displayed firmware file update is correct on the display.
12 Press the Enter button to update the firmware.
13 When the update is completed, the unit will reset, and return to the Zone status menu.

***NOTE:** The user data will **NOT** be over-written when the firmware is updated.



www.dutchlightinginnovations.com